

Dear users, the configuration for this camera is professional, so please read the user manual carefully before using the camera.

# **IP Camera**

## **(NCM series)**

---

### **User manual**

2013-04 V2.0








### Statement


If the user manual can not help you to solve the problem, please call our technology center for solutions. We will update the content for the new functions without notice.

### Notice

#### 1、Installation Environment

-  Keep away from the places for high-temperature, heat source and direct sunlight;
-  Keep away from water and when it gets wet, cut off the power immediately.
-  Avoid using at damp environment; the reference range for operation humidity is below 85%RH.
-  Avoid using in overheating and too cold environment, the reference range for operation temperature is -10℃ ~ +50℃
-  Please install it horizontally or wall mounting, avoid strenuous vibration place and not put other equipments onto the item

#### 2、Transport and Handling

-  The package is well-designed to ensure the security during the delivery, so please do not change the package at random.
- 1, Do not move the ip cameras from overheated to supercooled condition frequently, otherwise it will frost and shorten the service life.
  - 2, Do not move the item when it is on, otherwise the main board might be damaged.



#### Notice:

1. Please check the power supply before it is working.
2. Be careful not to bang the camera or subject it to strong impacts or shocks.
3. Do not directly touch the optical components for the image sensor, if necessary, please place a clean and moistened cloth with alcohol and wipe the dirt gently; When not in use, please place the dust cover on to the item to protect the image sensor.
4. Do not aim the camera directly into the sun or at other intense light sources that could affect the image quality (it is not the problem for the ip camera), also shorten the service life for the image sensor.
5. Keep away from laser when it is working, otherwise the image sensor can be damaged.
6. If the equipment is not working properly, please contact the store or the service center, do not disassemble or modify the equipment in any way. ( Problems caused by unauthorized modification or repair should be at your own risk. )

## Index

<b>1. PRODUCT INTRODUCTION .....</b>	<b>4</b>
1.1. PRODUCT SUMMARY .....	4
1.2. PACKAGE FOR TYPICAL PRODUCTION .....	4
<b>2. INSTALLATION GUIDE .....</b>	<b>6</b>
2.1. WIRED CONNECTION TO LAN .....	6
2.2. WIFI CONNECTION TO LAN .....	7
2.3. CONNECTION TO WAN .....	8
<b>3. OPERATION OF USING IE BROWSER .....</b>	<b>10</b>
3.1. VIEW VIDEO .....	10
3.2. VIDEO SETTING .....	11
3.2.1. Video parameters .....	11
3.2.2. Audio parameters .....	12
3.2.3. Image parameters .....	12
3.3. WEB SETTING .....	13
3.3.1. Basic web setting .....	13
3.3.2. WIFI setting .....	13
3.3.3. WAN access setting .....	13
3.3.4. ONVIF setting .....	14
3.4. ALARM SETTING .....	14
3.4.1. External Alarm Input .....	14
3.4.2. Motion Detection Setting .....	15
3.4.3. Alarm mode setting .....	15
3.4.4. Alarm time setting .....	16
3.5. ADVANCE SETTING .....	16
3.5.1. User management .....	16
3.5.2. Auto Capture Setting .....	17
3.5.3. Timer recording .....	17
3.5.4. E-mail Setting .....	18
3.5.5. FTP setting .....	18
3.5.6. Multiple settings .....	19
3.6. SYSTEM SETTING .....	19
3.6.1. Device information .....	19
3.6.2. Date and time setting .....	20
3.6.3. Initialize setting .....	20
3.6.4. System Log .....	20
<b>4. VISITING DEVICE BY OTHER SOFTWARE .....</b>	<b>21</b>
4.1. OTHER WEB BROWSER .....	21
4.2. MOBILE PHONE SOFTWARE .....	21
4.3. PC CLIENT SOFTWARE .....	22
4.4. OTHER COMMON SOFTWARE .....	22

<b>5. PRODUCT FAMILY FOR M SERIES .....</b>	<b>23</b>
5.1. HD CUBE CAMERA NCM-623W .....	23
5.2. HD PTZ CAMERA NCM-620W .....	23
5.3. HD PTZ CAMERA NCM-622W .....	24
5.4. HD PTZ CAMERA NCM-624W .....	24
5.5. HD PTZ CAMERA NCM-625W .....	25
5.6. HD WATERPROOF CAMERA NCM-621W .....	25
<b>APPENDIX: M SERIES IP CAMERA PARAMETERS COMPARISION LIST .....</b>	<b>1</b>

## 1. Product introduction

### 1.1. Product summary

Thank you for choosing our company's M series IP camera, which has several models, including indoor HD PTZ camera, indoor HD cube camera, outdoor HD waterproof camera etc. It is very suitable for family, shops, office building and so on.

#### Main features for M series:

- ◆ Support 3 kinds of H.264 video stream and 1 way MJPEG video stream simultaneously, suitable for Local, Internet and Cross-platform view;
- ◆ Support resolution for 1280\*720/640\*360/320\*180;
- ◆ Support 4 ways view in a video stream;
- ◆ Support two-way intercom function, and G.711 and G.726 audio encoding;
- ◆ Support 802.11b/g/n protocol, build-in WiFi module to perform wireless monitoring;
- ◆ Support max. 32G SD/TF card for storing the alarm video and pictures, timing snapshot and recording;
- ◆ Built-in web server, use one port to send all the data, users can facilitates network setting;
- ◆ Support ONVIF and RTSP protocol, easy to integrate it to NVR or large client software;
- ◆ Support WPS/QSS function;
- ◆ Support POE function for some cameras, user optional;
- ◆ Support multi-languages web interface, support 1/4/9 split screen to perform several view at same time;
- ◆ Manufacturer puts a label of DDNS at the bottom of each IP Camera. When IP Camera is connected to the internet, this URL can be used to visit the device;
- ◆ Provide free client software, support Multi-view, Long time recording, video replay etc;
- ◆ Provide free software viewed by mobile phone.

### 1.2. Package for typical production

Type \ Accessory	Power adaptor	CD	Cable	Bracket	Stand of plastic	Antenna
------------------	---------------	----	-------	---------	------------------	---------

 HD Cube camera NCM-623W	5V	√	√	√	√	Built in
 HD PTZ camera NCM-620W	5V	√	√	√	√	Optional
 HD PTZ camera NCM-622W	5V	√	√	√	√	√
 HD PTZ camera NCM-624W	5V	√	√	√	√	Optional
 HD PTZ camera NCM-625W	5V	√	√	√	√	Optional
 HD waterproof camera NCM-621W	12V	√	√	√	√	Optional

Notice:

- ◆ If you choose IP camera with wireless function, so it includes wifi module inside the camera and antenna in package.
- ◆ Please check carefully if all listed items are included in the package, if anything

missing, please contact vendor in time.

## 2. Installation guide

### 2.1. Wired connection to LAN

- ✚ Power on the IP camera (please check carefully the voltage of power adaptor, don't insert incorrect power, otherwise it will be damaged), connect IP camera to router by network cable and connect computer to the same router, example of figure 1.



Figure 1

- ✚ Insert attached CD to computer driver, double click "H&MSearch\_en.exe" in the CD, will pop up the interface as figure 2, please operate as the following steps:

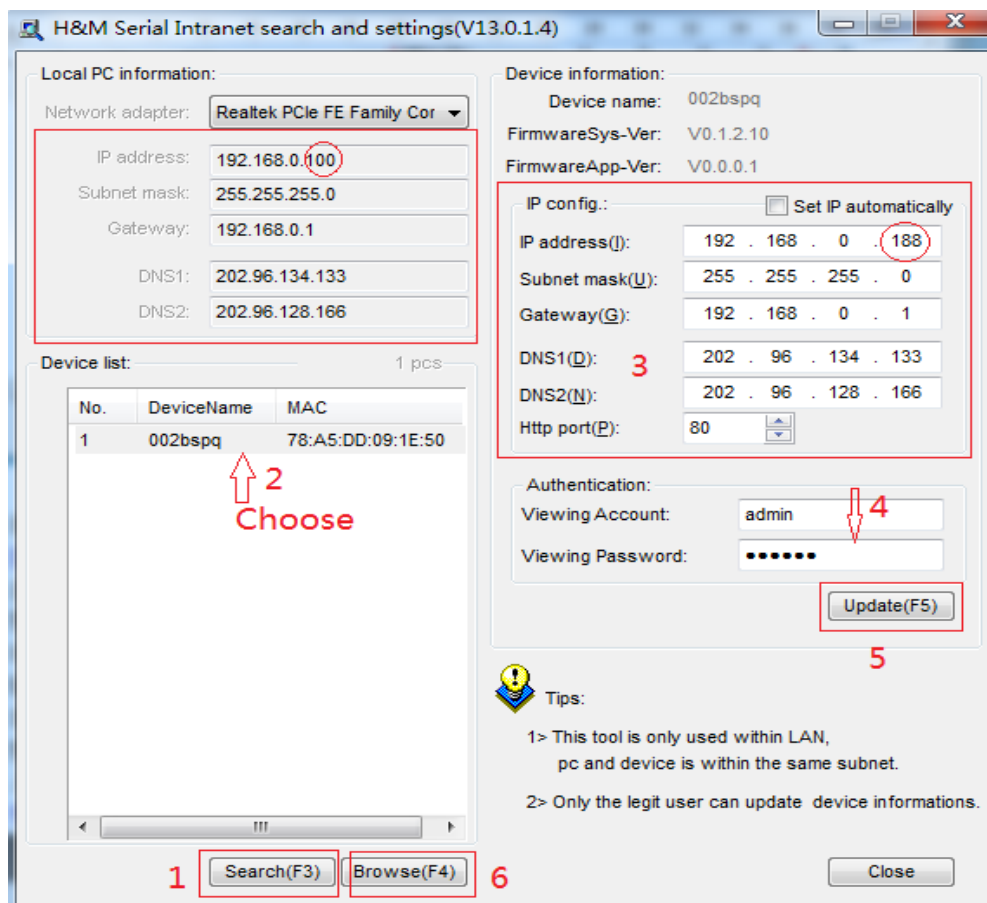


Figure 2

- 1) Click "Search" (Please make sure your firewall will not block up the item to be searched)

- 2) Choose a camera;
- 3) Change the ip address of the ip camera according to the information in the red frame on the left. The numbers in the red circle should not be the same. The Http port should be a number between 80~65535;
- 4) Enter user name and password for the device, the default is “admin” and “123456”;
- 5) Click “update”;
- 6) After updating successfully, click “Search (F3)”, choose the device again and click “Browse (F4)”. Then you can run the web browser, enter user name and password and login IP camera to view the video, example of figure 3. (please use IE browser at first time)

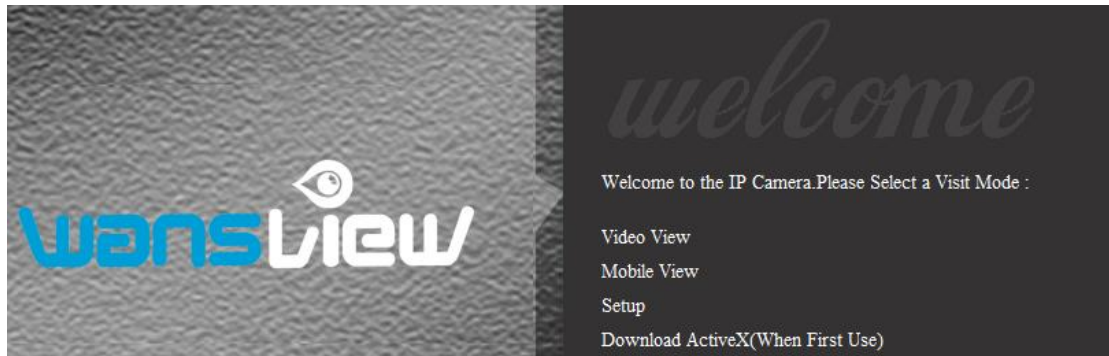


Figure 3

Notice: Need to download ActiveX when first use, click “download ActiveX( when first use)” in figure 3, will display prompt as figure 4, click ‘run’ will download and install the ActiveX automatically.

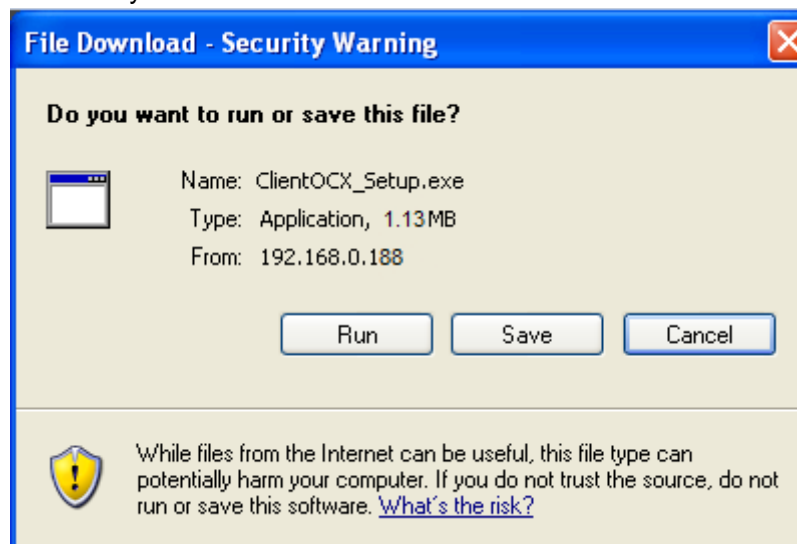


Figure 4

Tips: You can hold on reset button on the camera for 10 seconds to restore factory default if you forget user name and password, or not sure the device parameters.

## 2.2. WiFi connection to LAN

After finishing the wired connection as chapter 2.1, you can connect the camera by WiFi. Login camera in wired connection and enter wifi setting, and then operate as the



following step, example of figure 5.



Figure 5

Select 'On' and click 'Search', and then select wireless router in pop up menu, click 'OK' and enter its password, click 'apply' to save the wireless settings. And you can click 'check' to check if the wireless setting is successful. After setting successfully, please pull out network cable and reboot the camera to use the wireless function.

**Because the camera supports WPS/QSS, so you can set wireless by simple way as below.**

- 1) Please confirm if the router connected to camera supports WPS/QSS (you can check user manual of the router or get the support from router factory);
- 2) Press WPS/QSS button on the router, it will launch the function.
- 3) Press and hold on reset button for 2~5 seconds after it ran normally (not need connect cable) , it will launch the WPS/QSS function, then match the setting with the router, the status LED always on when it was matching, and it will flash after matching successfully.
- 4) Unplug power adaptor and reboot the camera, then you can use the wireless connect function.

Note: The camera will automatically stop the function when the matching is unsuccessful after continuing 50 seconds. Due to different kinds of the router, we don't sure our camera can be connected to all routers successfully.

## 2.3. Connection to WAN

You should connect it to LAN network and do the port forwarding at first, and then connect the LAN network to WAN, connect as figure 6.

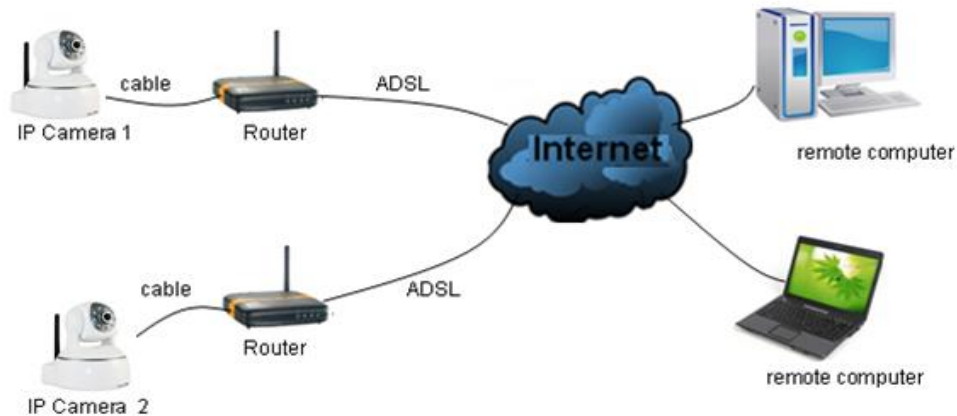


Figure 6

For example: operation step of port forwarding as figure 7.



Figure 7

- 1) Please go to the setting interface of Router, and choose "Port Forwarding";
- 2) Choose "Add custom Service" ;
- 3) Input IP camera http port;
- 4) Input LAN IP Address of the camera, click "Apply" (port number and IP address as you set in figure 2)

After finishing the port forwarding, you can use WAN IP address of router and http port of camera to visit the camera by remote computer as figure 6.

Notice: because the routers are different, so the interface and setting method of router are also different, how to do the port forwarding for various routers, please refer to the

user manual of your router or consult with router manufacturer.

### 3. Operation of using IE browser

#### 3.1. View video



Figure 8

#### 1) Status bar



Figure 9

- ① Display connection status;
- ② Display record status: if click "Record", it will show "REC" which stands for recording; click record button again, it will stop;
- ③ Zoom out, zoom in and restore digital zoom;
- ④ Set saving file path: set the location for recording and capturing file storage;
- ⑤ Talk button: Click this button to hear what the person at the side of computer talks. Click it again, it will stop playing;
- ⑥ Audio monitor button: Click this button to hear what people talking about at the side of IP Cameras,


#### 2) Choose video stream



You can choose primary stream or second stream, third stream to view the video.

Recommend to view by primary stream in LAN, by second stream in WAN and by third stream in mobile phone.


You can view the video by four, nine pictures in same screen, but need to set the camera in 3.6.6 multiple setting.

#### 3) PTZ control

If the camera supports PTZ function, you can click up, down, left, right arrow to control the camera moving, click  button to center and stop the camera.


When you set camera to a preset position, and then click , after the camera is changed to other direction, click  can move the camera to the position you have set.

#### 4) Snap /record / SD card/playback

- ◆ Click “Snap” button, to save the picture to the specified file.
  - ◆ Click “Record” button to start record. Click again to stop record.
  - ◆ Click “Check TF/SD card” can browse the files in the SD card (If the SD card already inside the camera), you can select file to download it;
  - ◆ Click “Playback” button, it will show a player which can play the record video.
- For these buttons  means: play; stop; open video file; slow play; quick play.

## 3.2. Video setting

### 3.2.1. Video parameters



The screenshot shows the 'Video Parameters' configuration window. It includes sections for 'First stream', 'Second stream', 'Third stream', 'JPEG Stream', and 'Overlay Options'. Red arrows and text provide additional instructions:

- Power Line Frequency:** 50Hz. Annotation: "If pictures have ripple, can adjust it to eliminate ripple here".
- First stream:** Resolution: 1280x720, Bit Rate: 4096 kbps, Frame Rate: 25 fps. Annotation: "The bigger the bit rate, the video is more fluent, take up more bandwidth." (pointing to Bit Rate).
- Second stream:** Resolution: 640x360, Bit Rate: 1024 kbps, Frame Rate: 25 fps. Annotation: "The higher the frame rate, the more smooth image." (pointing to Frame Rate).
- Third stream:** Resolution: 320x180, Bit Rate: 256 kbps, Frame Rate: 25 fps.
- JPEG Stream:** Resolution: 320x180.
- Overlay Options:** Time Stamp: On, Camera Name: On. Annotation: "They will be displayed at monitoring image when selected 'on'".
- Name:** IP Camera. Note: "Don't input special characters like: ~!@#%&\*()\_+=?/:)".

Buttons: Apply, Cancel.

Figure 10

JPEG stream is for some views by non windows platform, for example, click 'mobile view' in first page, it will transmit JPEG stream actually.

### 3.2.2. Audio parameters

**Audio Options**

Input Volume : 65 (1-100)

Output Volume : 45 (1-100)

**First stream**

Audio Capture : ☒ On ☐ Off

Audio Type : G.711 **⇒ G.711 sound quality is good but takes up more bandwidth.**

**Second stream**

Audio Capture : ☒ On ☐ Off

Audio Type : G.726 **⇒ G.726 sound quality is worse but takes up less bandwidth.**

**Third stream**

Audio Capture : ☒ On ☐ Off

Audio Type : G.726

Apply Cancel

Figure 11

The camera supports G.711 and G.726 audio encoding format. The sound of the G.711 is better, but it occupies more bandwidth. If you click “On” of the audio capture, so it will transmit audio in corresponding video stream. Please open the audio here, should you hear the sound when clicking audio play button in figure 9.

### 3.2.3. Image parameters

Brightness : 130

Saturation : 70

Contrast : 7

☐ Flip ☐ Mirror

IR LED Control : ☒ Auto ☐ Close

Night Mode : ☐ On ☒ Off


Apply Default Cancel

Figure 12

You can select “close” to disable IR LED when you don’t need it. It will cut frame rate automatically to enhance night vision at night when select “on”.

## 3.3. Web setting

### 3.3.1. Basic web setting

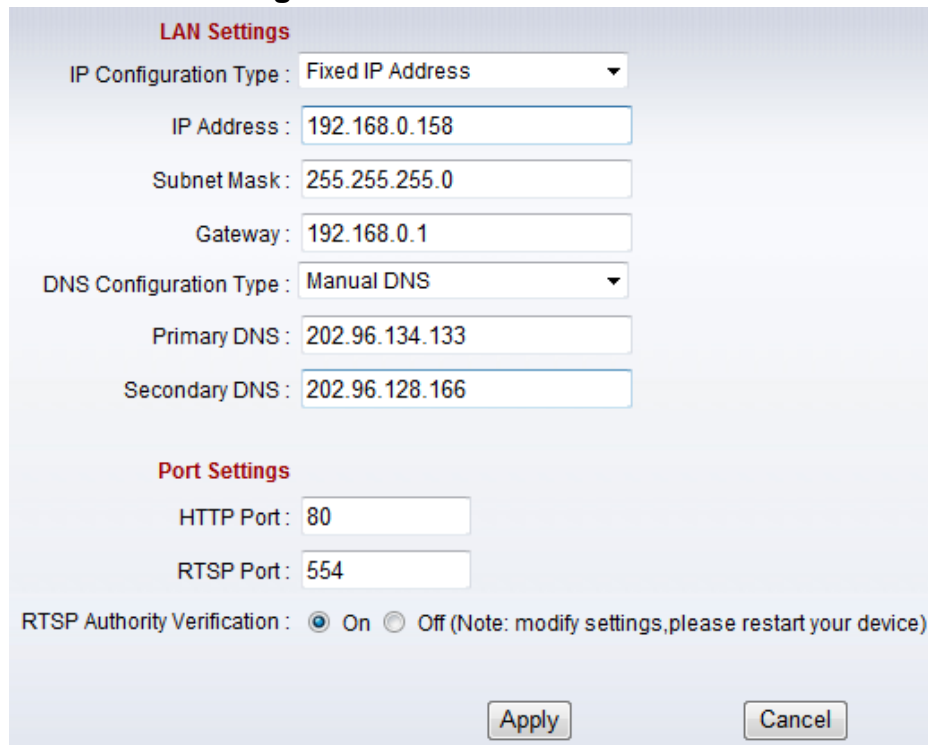

The screenshot displays the 'Basic web setting' window. It is divided into two sections: 'LAN Settings' and 'Port Settings'. Under 'LAN Settings', there are fields for 'IP Configuration Type' (set to 'Fixed IP Address'), 'IP Address' (192.168.0.158), 'Subnet Mask' (255.255.255.0), 'Gateway' (192.168.0.1), 'DNS Configuration Type' (set to 'Manual DNS'), 'Primary DNS' (202.96.134.133), and 'Secondary DNS' (202.96.128.166). Under 'Port Settings', there are fields for 'HTTP Port' (80) and 'RTSP Port' (554). At the bottom, there is a 'RTSP Authority Verification' section with radio buttons for 'On' (selected) and 'Off', followed by a note: '(Note: modify settings, please restart your device)'. At the very bottom are 'Apply' and 'Cancel' buttons.

Figure 13


The cameras support RTSP protocol, if select “on” of “RTSP authority verification”, you need to enter user name and password when invoke video by RTSP protocol.

### 3.3.2. WIFI setting

Please refer to chapter 2.2.

### 3.3.3. WAN access setting

In chapter 2.3, you have known how to do port forwarding. After the success of the port forwarding, you can also visit camera by DDNS. The manufacturer has established a DDNS system, and allotted a DDNS to every device, the user can view it from remote PC, example of figure 14.

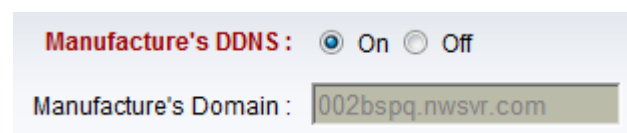


The screenshot shows the 'WAN access setting' window. It features a 'Manufacture's DDNS' section with radio buttons for 'On' (selected) and 'Off'. Below this is a 'Manufacture's Domain' field containing the text '002bspq.nwsvr.com'.

Figure 14

User can also use third party DDNS, such as [www.dyndns.com](http://www.dyndns.com). User applies a free domain name from this website and fills the info into below blanks (Figure 15) and saves the settings. Then the domain name can be used.



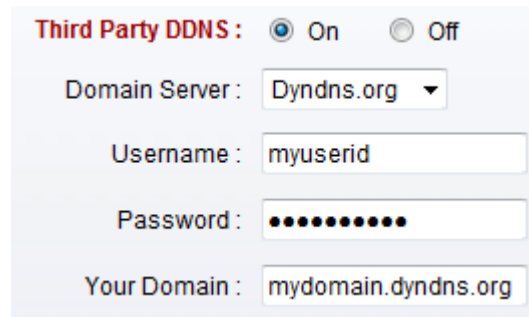

Third Party DDNS : ☒ On ☐ Off

Domain Server :

Username :

Password :


Your Domain :

Figure 15

Notice: Using the third party DDNS, if the http port is not 80, the port number should be adding to the domain name with colon.

Example: <http://mydomain.dyndns.org:81>.

### 3.3.4. ONVIF setting

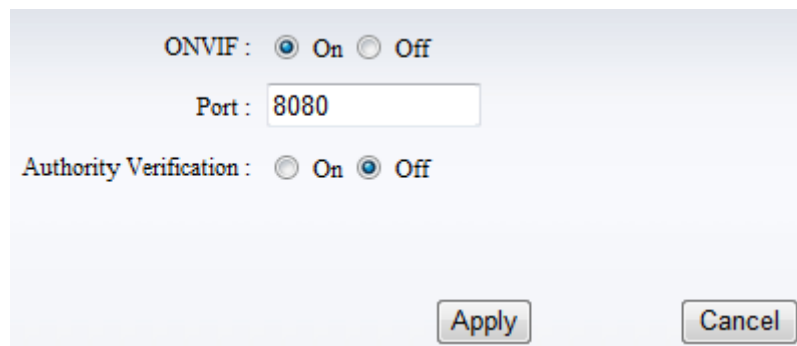

ONVIF : ☒ On ☐ Off

Port :


Authority Verification : ☐ On ☒ Off

Figure 16

The camera supports ONVIF protocol, so it can be interconnected with other factory camera with ONVIF.

## 3.4. Alarm setting

### 3.4.1. External Alarm Input

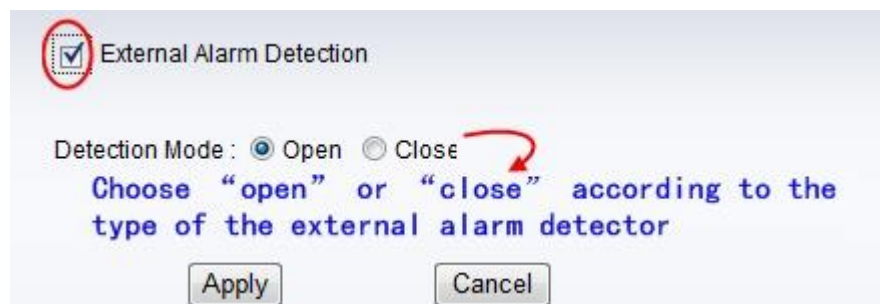

☒ External Alarm Detection

Detection Mode : ☒ Open ☐ Close

Choose "open" or "close" according to the type of the external alarm detector

Figure 17

The camera should have external alarm input port for enable this functions. Connect external alarm detector to the input port, the detector will output switching signal when it detects any abnormal, input port of the camera will detect the level change, so it will detect the alarm, therefore the detector should be switching sensor (same as switch)

### 3.4.2. Motion Detection Setting

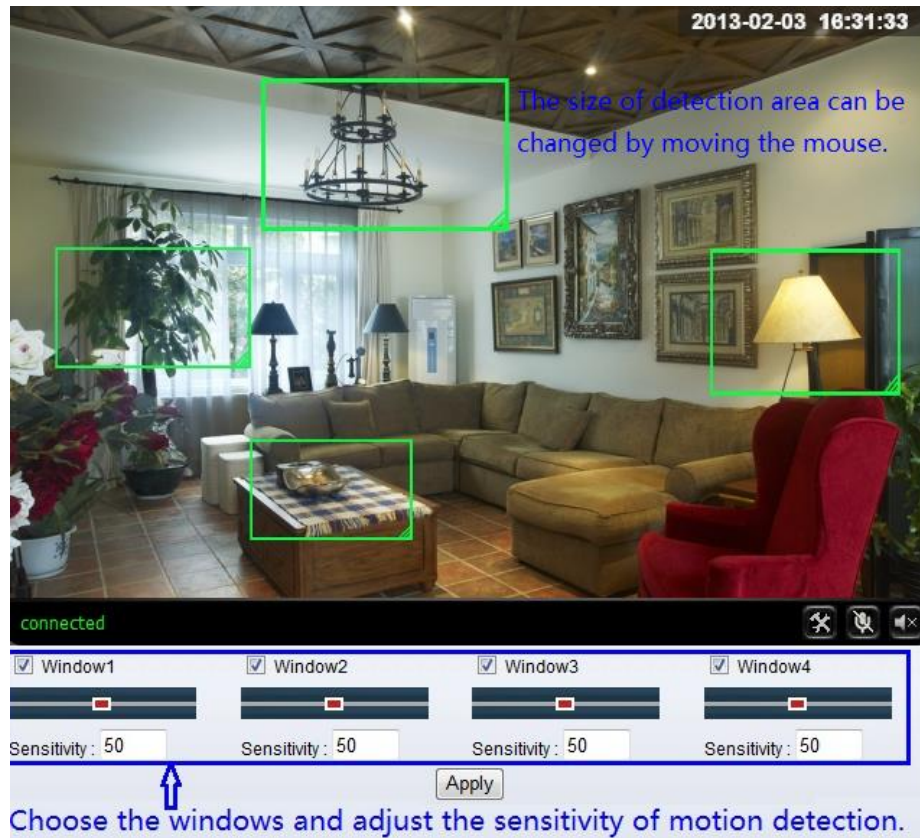


Figure 18

Please click “apply” after the settings are done, and motion detection takes effect. The higher value, the higher sensitivity. The camera will trigger corresponding alarm when any change occurs in the detection area.

### 3.4.3. Alarm mode setting

After camera detects any change, it will alarm as several mode, example of figure 18.

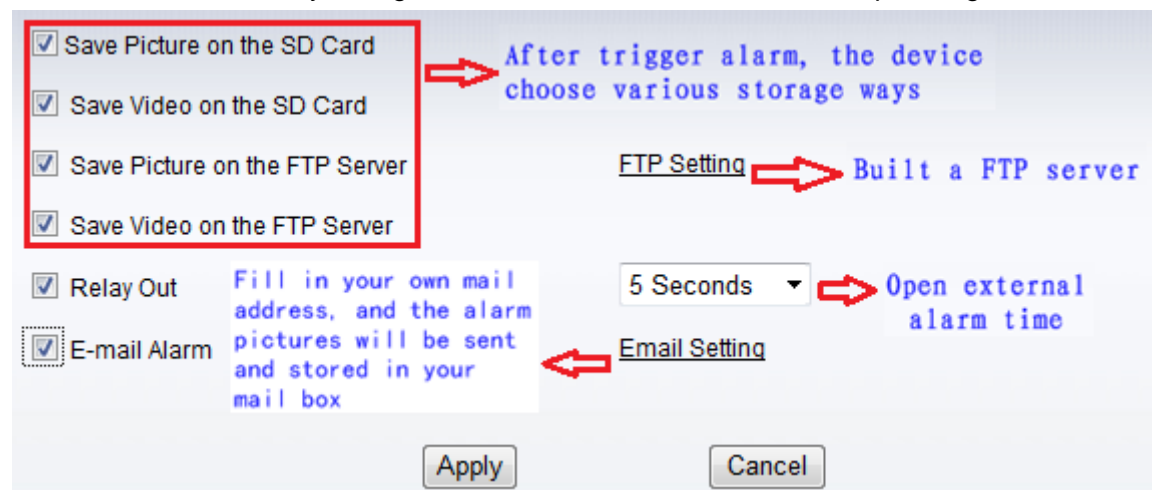


Figure 19



### 3.4.4. Alarm time setting

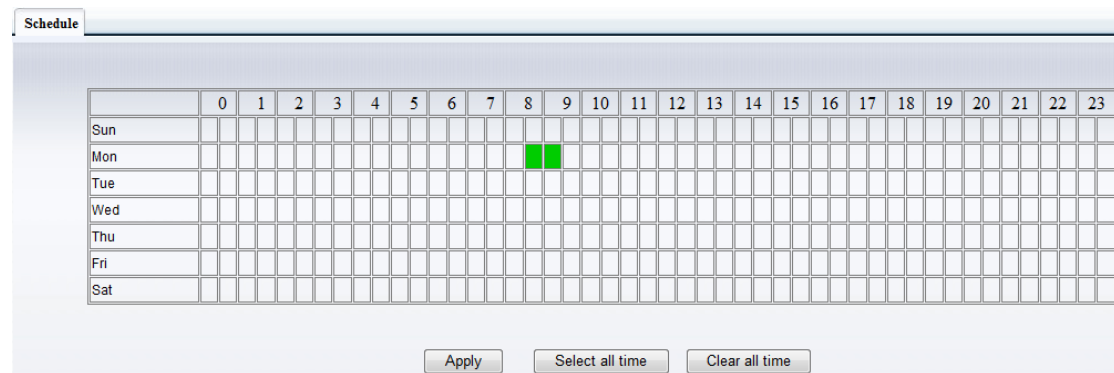


Figure 20

The device will trigger the alarm only during the scheduled time period, you can select the scheduled time according to your request. Example of figure 20, set armed time from Mon 8:30 to 9:00, you only need to click the corresponding time block to set them, the time block will become green when you selected.

*Note: Please make sure your system time is correct before you set the alarm time period. Please refer to chapter 3.6.2 to set system time.*

## 3.5. Advance setting

### 3.5.1. User management

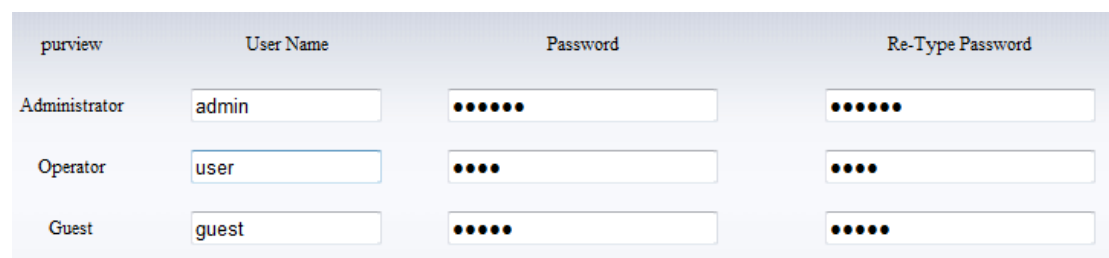



Figure 21

There are 3 levels of user authorization in it.

- ◆ Administrator: “admin” has the highest authority. It can do any settings. [The factory default password: 123456.](#)
- ◆ User: user can only operate the device but can’t do any settings. [The default password is user.](#)
- ◆ Guest: User can view the video, but can’t operate the device. [The default password is guest.](#)

*Note: Please change these 3 level passwords when your first use to ensure your safety.*

### 3.5.2. Auto Capture Setting

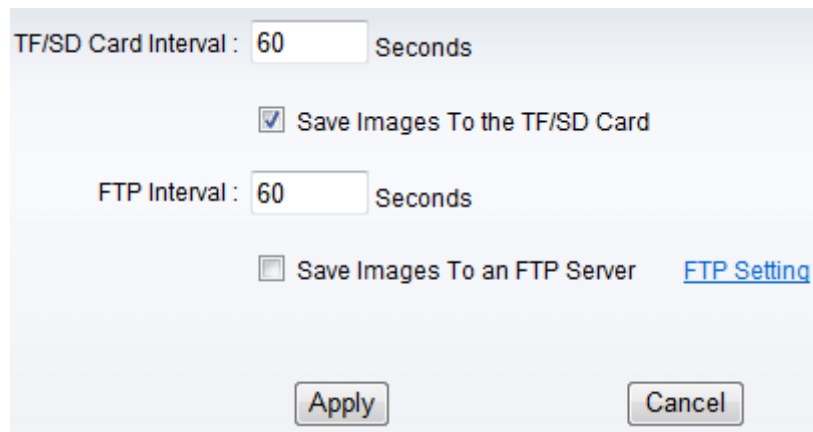

TF/SD Card Interval : 60 Seconds

☒ Save Images To the TF/SD Card


FTP Interval : 60 Seconds

☐ Save Images To an FTP Server [FTP Setting](#)

Figure 22

Tick “Save Images to the TF/SD card”, the snap pictures will be stored into SD card during the setting time.

### 3.5.3. Timer recording

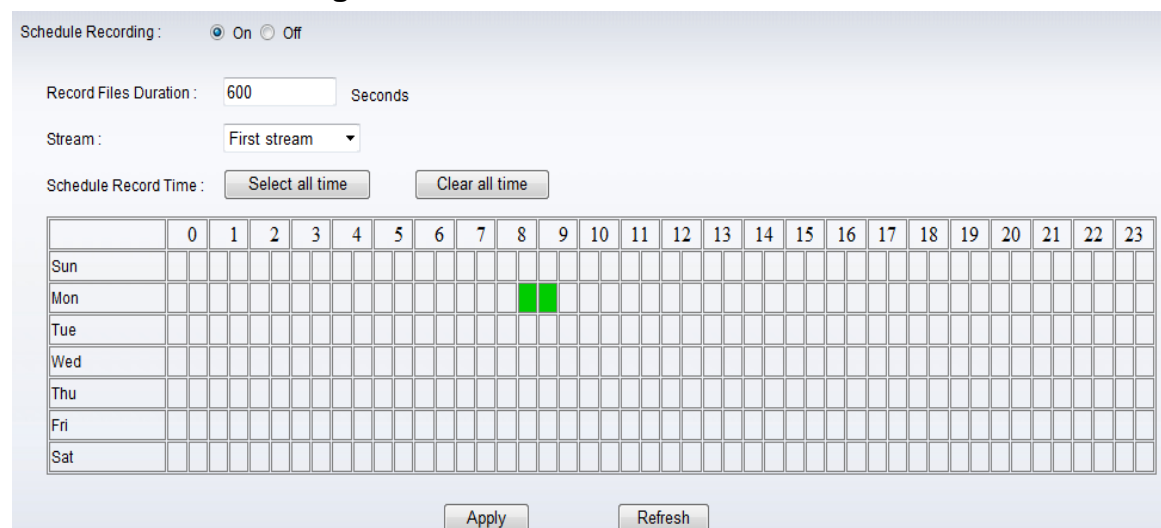

Schedule Recording : ☒ On ☐ Off

Record Files Duration : 600 Seconds

Stream : First stream

Schedule Record Time :

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23
Sun																								
Mon																								
Tue																								
Wed																								
Thu																								
Fri																								
Sat																								

Figure 23

Example of figure 23, set recording time from Mon 8:30 to 9:00.

### 3.5.4. E-mail Setting

SMTP Server Name :  Server Port  SSL ☐

Authentication : ☒ On ☐ Off

User Name :

Password :

Send To :  (e-Mail Address 1)

(e-Mail Address 2)

(e-Mail Address 3)

Sender :  (Return e-Mail address)

Subject :

Message :

(The maximum length of 255 Characters)

Test Email settings :  Please set parameters at first, and then test it.

Figure 24

The SMTP server name: It is mailbox server, for example of SOHU mailbox, it is "smtp.sohu.com". Please fill all blanks which we filled above in figure 24 as example. Otherwise, the settings will fail.

Please click "Test" to test if the E-mail setting is successful.

### 3.5.5. FTP setting

Server Address :

Server Port :

User Name :

Password :

Path :

Passive Mode : ☒ On ☐ Off

Test FTP Settings :  Please set parameters at first, and then test it.

Figure 25

Before to use FTP function, please get the following ready.

- 1) FTP user name and password
- 2) FTP storage space and the authority
- 3) Create sub-category to store the video or pictures.

**Notice:** The password should not be special character; otherwise the camera can't

identify it.

### 3.5.6. Multiple settings

**Multiple Settings**

The 1st device	Native
<a href="#">The 2nd device</a>	None
<a href="#">The 3rd device</a>	None
<a href="#">The 4th device</a>	None
<a href="#">The 5th device</a>	None
<a href="#">The 6th device</a>	None
<a href="#">The 7th device</a>	None
<a href="#">The 8th device</a>	None
<a href="#">The 9th device</a>	None

**Lan Search**

002bspq(192.168.0.188)

Figure 26

Please set multiple devices here first to view 4 or 9 split screen at chapter 3.1 browse interface.

## 3.6. System setting

### 3.6.1. Device information

Device ID : 002bspq

Current Client : 0

Network Connection : Wired Connection

Software Version : V0.1.2.10

Web Version : V0.0.0.1

Mac Address : 78:A5:DD:09:1E:50

IP Address : 192.168.0.188

Subnet Mask : 255.255.255.0

Default Gateway : 192.168.0.1

Preferred DNS Server : 202.96.134.133

Secondary DNS : 202.96.128.166

Running Time : 2013-02-03 11:45:27

TF/SD Status : Have Card[The Total Capacity of : 7759028KB The Rem


[View the Contents of the TF/SD Card](#) [Format the TF/SD Card](#) [Stop the TF/SD Card](#)

Figure 27

SD status shows the free capacity if SD card is installed.

Notice: the device supports max 32G SD card. Please format the SD card to FAT32 before use the card on camera. Please check if the SD Card matches the camera or not before purchasing the SD Card.

### 3.6.2. Date and time setting

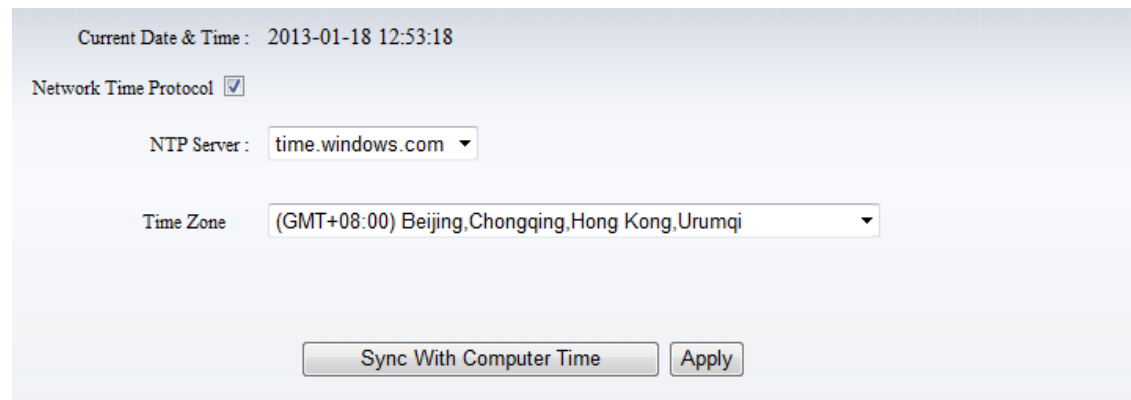

Current Date & Time : 2013-01-18 12:53:18

Network Time Protocol ☒

NTP Server : time.windows.com ▼


Time Zone : (GMT+08:00) Beijing,Chongqing,Hong Kong,Urumqi ▼

Sync With Computer Time Apply

Figure 28

Example of figure 28, please select the time zone at first and then select a NTP server and obtain time from network time server.

### 3.6.3. Initialize setting

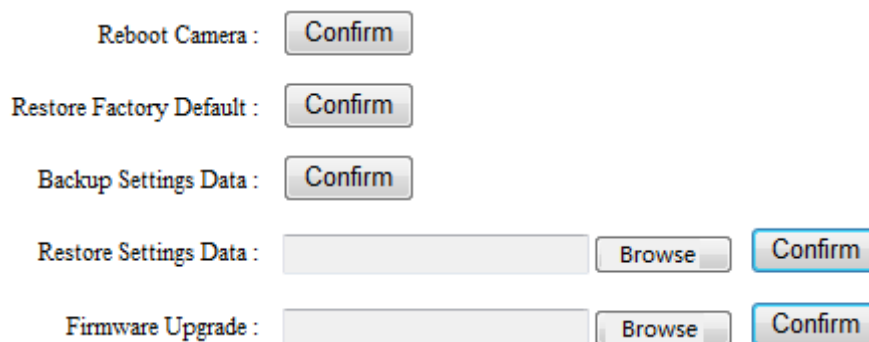

Reboot Camera : Confirm

Restore Factory Default : Confirm

Backup Settings Data : Confirm

Restore Settings Data : Browse Confirm


Firmware Upgrade : Browse Confirm

Figure 29

If you click “Confirm” of Backup setting data, the camera will create a file, you can store it to your computer, and you can directly call this file to restore the settings. The function helps to manage the cameras and no need to do all the settings again.

The firmware upgrade is for updating system firmware and web UI.

### 3.6.4. System Log

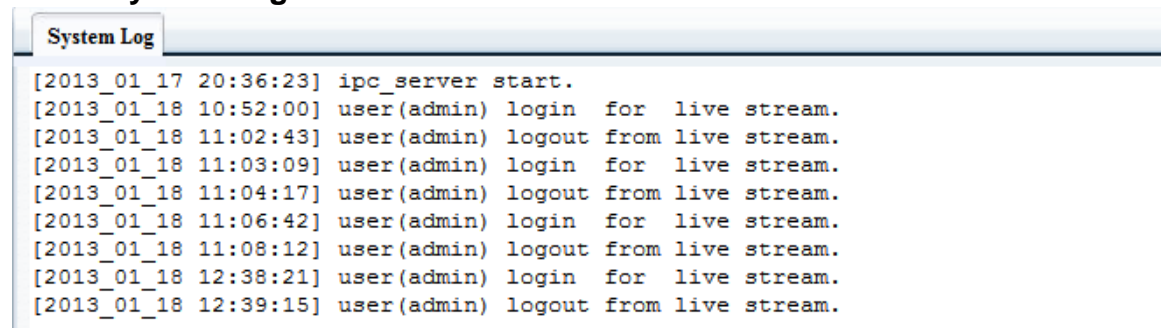

System Log	
[2013_01_17 20:36:23]	ipc_server start.
[2013_01_18 10:52:00]	user(admin) login for live stream.
[2013_01_18 11:02:43]	user(admin) logout from live stream.
[2013_01_18 11:03:09]	user(admin) login for live stream.
[2013_01_18 11:04:17]	user(admin) logout from live stream.
[2013_01_18 11:06:42]	user(admin) login for live stream.
[2013_01_18 11:08:12]	user(admin) logout from live stream.
[2013_01_18 12:38:21]	user(admin) login for live stream.
[2013_01_18 12:39:15]	user(admin) logout from live stream.

Figure 30

## 4. Visiting device by other software

### 4.1. Other web browser

In the Windows OS, for using browser with IE kernel, user must download the ActiveX. While for Safari and Firefox browsers, please Download “QuickTime” plug-in and install it to access the IP camera. After installation, please run the QuickTime program to access the QuickTime Preferences dialog box from Edit Menu, example as figure 31. Click “Advanced”, select “custom.” in the Transport Setup. It pops up the Streaming Transport dialog box. Please select “HTTP” for transport protocol and “80” as port ID, click “ok”, and then return to Transport Setup to change “Custom..” to “Auto”. Finally, click “ok” at the bottom. After finishing these settings, run the Firefox or Safari browser to view the video.

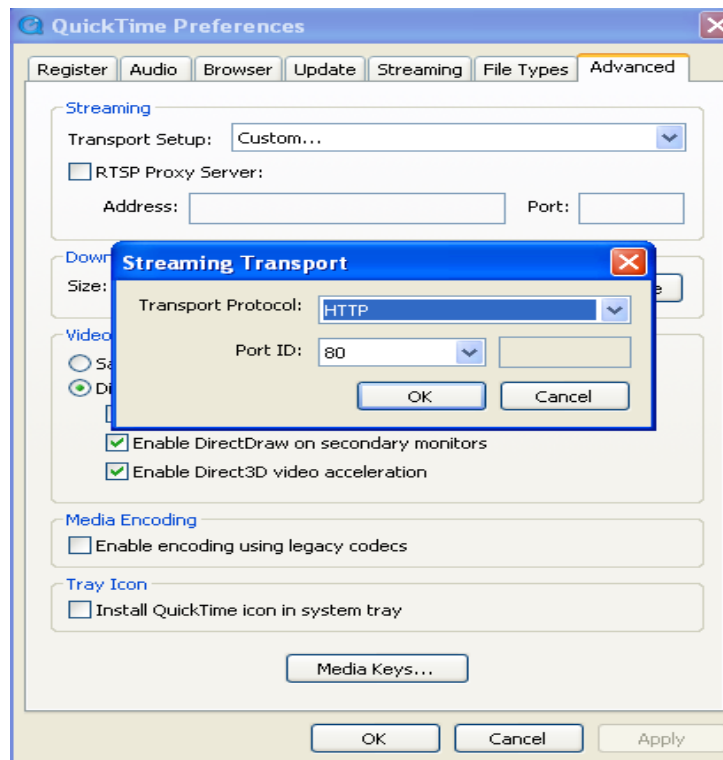


Figure 31

In Mac computer, the Quicktime is installed by default, so the user simply accesses setting tool folder at application folder and run the command program, enter command by command line mode:

```
qtdefaults write TransportSettings HTTP 80
```

And then run the Safari browser to view the video.

Note: Please select the G.711 audio code format for hearing sound in Quicktime plug-in.

### 4.2. Mobile phone software

For more information, please see the user manual for mobile phone in attached CD, or download the latest software and user manual in our website.

### 4.3. PC Client software

IPCMonitor is a free software offered by factory, several devices on LAN and WAN can be browsed at the same time. The software also support real time recording, schedule recording, alarm, snap, and so on. The interface is as Figure 32.

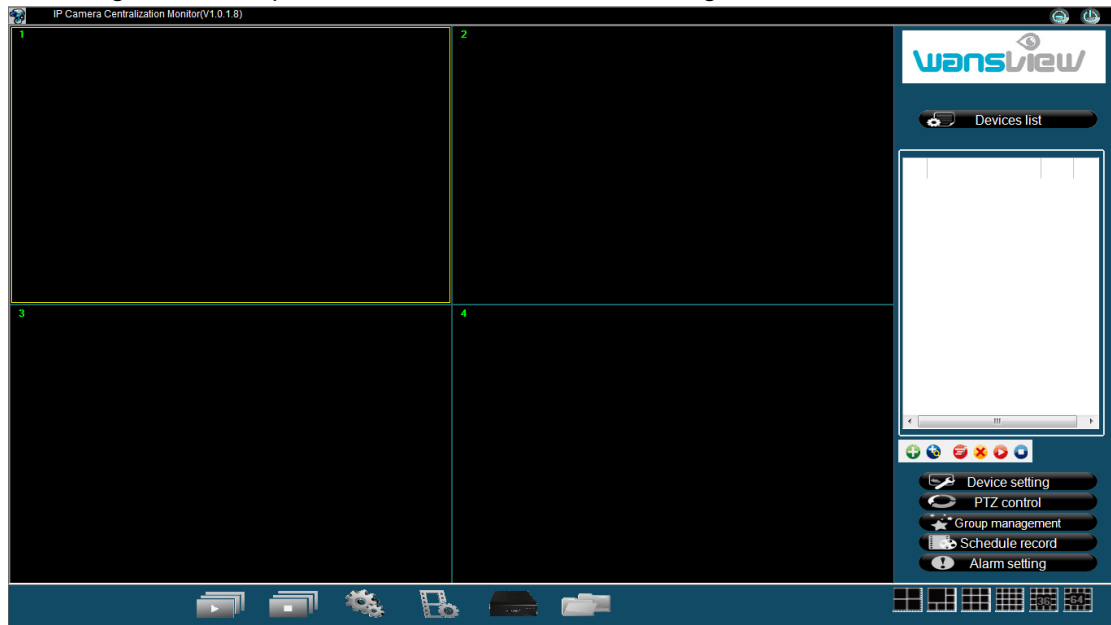


Figure 32

For more information, pls. refer the <<IPCMonitor User Manual>> in CD.

### 4.4. Other common software

As the device supports RTSP protocol, you can use VLC player to play IP Camera video. It is compatible with VLC 1.1.12 version or above. Please use below URL to visit:

- rtsp://ip:port/11 (View the video by first stream)
- rtsp://ip:port/12 (View video by second stream)
- rtsp://ip:port/13 (View video by third stream)

The port is RTSP port; please refer to the settings of Figure 13.

## 5. Product family for M series

### 5.1. HD Cube Camera NCM-623W

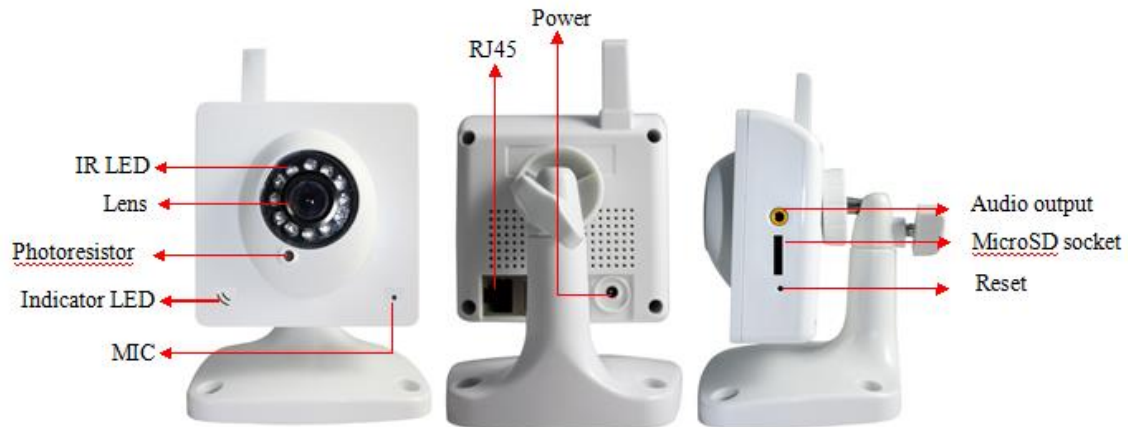


Figure 33 NCM-623W

Mega pixels CMOS sensor, IR-CUT, 3.6mm lens, built in MIC, support TF card, 12pcs IR LED, audio out interface. It uses 5V power adaptor.

### 5.2. HD PTZ Camera NCM-620W



Figure 34 NCM-620W

Mega pixels CMOS sensor, IR-CUT, 3.6mm lens, built in PTZ, MIC, support TF card, 11pcs IR LED, audio out interface. It uses 5V power adaptor.



### 5.3. HD PTZ Camera NCM-622W



Figure 35 NCM-622W

Mega pixels CMOS sensor, IR-CUT, 3.6mm lens, built-in PTZ, MIC, speaker, support TF card, 11pcs IR LED, audio out interface. It uses 5V power adaptor.

### 5.4. HD PTZ Camera NCM-624W

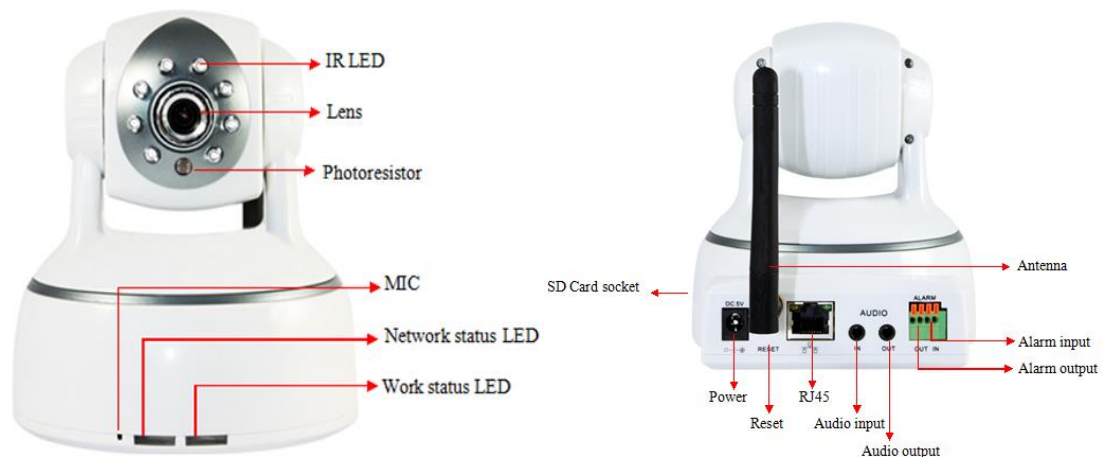


Figure 36 NCM-624W

Mega pixels CMOS sensor, IR-CUT, 3.6mm lens, built in PTZ, MIC, support SD card, 8pcs IR LED, audio in/out interface, alarm in/out interface. It uses 5V power adaptor.

## 5.5. HD PTZ Camera NCM-625W

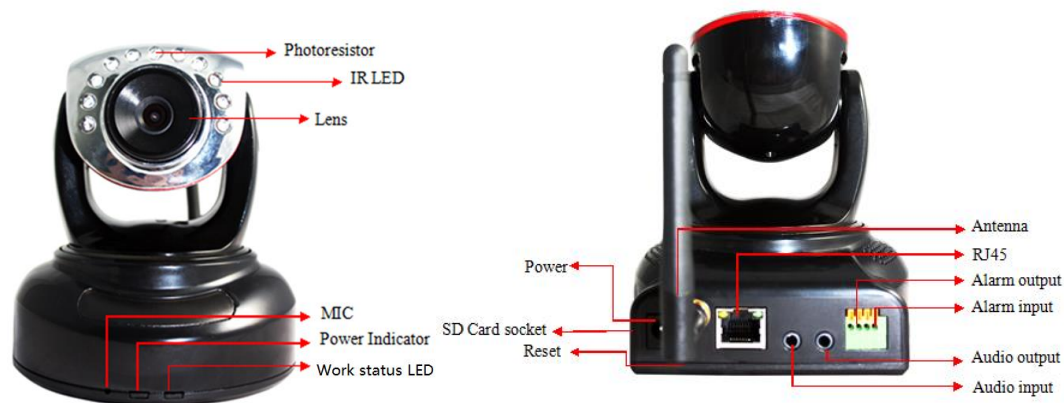


Figure 37 NCM-625W

Mega pixels CMOS sensor, IR-CUT, 3.6mm lens, built in PTZ, MIC, support SD card, 10pcs IR LED, audio in/out interface, alarm in/out interface. It uses 5V power adaptor.

## 5.6. HD waterproof camera NCM-621W




Figure 38 NCM-621W

Mega pixels CMOS sensor, IR-CUT, 8mm lens, 36pcs IR LED, POE function optional, it uses 12V power adaptor.

### Statement:

1. This manual may be different with your using camera, if you have any questions of the manual, please contact our technical support.
2. This manual will be updated periodically; the company reserved the right without prior notice.

## Appendix: M series IP camera parameters comparison list

Product Function						
Video Compression	H.264/M-JPEG					
Resolution	1280*720/640*360/320*180					
Max. Framerate	30fps					
Audio compression	G.711/G.726					
Main software function	Support HTTP, DHCP, IEEE 802.11b/g/n, NTP, FTP, SMTP, ONVIF, RTSP, WPS, P2P protocol etc; Support 32GB TF/SD card; support motion detection; three level of user authority; PTZ preset point; support upgrading online					
SD/TF	Micro SD ( support Max. 32GB )				SD ( support Max. 32GB )	
IR-cut	Yes					
Lens	3.6mm	8mm	3.6mm	3.6mm	3.6mm	3.6mm
Pan/Tilt	Tilt 100°Pan 350°	N/A	Tilt 100°Pan 350°	N/A	Tilt 100°	Pan 350°
Night vision	11pcs IR LED, 8m distance	36pcs IR LED, 25m distance	11pcs IR LED, 8m distance	12pcs IR LED, 8m distance	8pcs IR LED, 5m distance	10pcs IR LED, 6m distance
Wi-Fi	optional	optional	Yes	Yes	optional	optional
Audio	Built in MIC, audio out	N/A	Built in MIC and speaker, audio out	Built in MIC, audio out	Built in MIC, audio in/out	
Alarm	N/A				1 way alarm in/out	
Power supply	5V power consumption<6W	12V power consumption<10W	5V power consumption<6W	5V power consumption<6W	5V power consumption<6W	5V power consumption<6W
Work condition	-10℃~ 50℃ under 85%RH					
Body size	106*99*126mm	220*112*106mm	102*110*130mm	48*85*110mm	102*107*148mm	111*110*125mm